

TipTop™ Bipod - User Manual

Installation Instructions - TipTop™ Series-III, Series-V and Series-VII Rifle Bipods

1. Make sure that the firearm is not loaded when installing, adjusting or removing the Bipod.
2. Loosen the Clamp Adjustment Thumbscrew by turning counterclockwise.
3. Spread the Swivel Stud Clamp and engage pins in the rifle Swivel Stud. The legs will be forward when mounted on the firearm and in the retracted position.
4. Turn the Clamp Adjustment Thumbscrew clockwise until the Bipod is secured to the firearm. D
5. o not over-tighten.
6. Make sure that the legs are at least 1 inch behind the muzzle when the Bipod is installed and in the retracted position.
7. A sling swivel may be attached to the holes of the Sling Swivel Attachment.

Operating Instructions

1. Always follow safe firearms handling practices. Failure may result in damage, personal injury or death.
2. Do not reach in front of the firearm muzzle to adjust the Bipod.
3. Keep the firearm pointed in a safe direction at all times.
4. Rotate the Bipod legs down into the Shooting Position.
5. Make sure that that Leg Lock Thumbscrews are loosened by turning counterclockwise.
6. Extend legs to full length by pulling on the Rubber Feet until they lock in place.
7. Release legs by pressing on the Leg Adjustment Button. A spring inside of the leg will automatically release to the short position. CAUTION – Pinch Hazard.
8. To extend the leg to an intermediate length, pull on the Rubber Feet to desired length, then tighten the Leg Lock Thumbscrew (clockwise).
9. Release legs from intermediate positions by loosening the Leg Lock Thumbscrew (counter-clockwise). CAUTION – Pinch Hazard.
10. Retract legs to the short position before folding legs back to the Retracted Position. CAUTION – Pinch Hazard.
11. Press the Tension Lever to the right to loosen the Bipod.
12. The EZlevel™ feature allows the shooter to level the sights by tilting the firearm.
13. The EZpan™ feature allows the shooter to scan the firearm left and right to align the sights to the target.
14. After leveling and aligning the sights, press the Tension Lever to the left.

TipTop™ Bipod - User Manual

Safety Warnings

1. Always follow safe firearms handling practices. Failure may result in damage, personal injury or death.
2. Make sure that the firearm is not loaded when installing, adjusting or removing the Bipod.
3. Do not reach in front of the firearm muzzle to adjust the Bipod.
4. Be careful when deploying and retracting Bipod legs so that you do not pinch fingers.
5. Do not pull back on the firearm when supported on the Bipod. Pulling back on the firearm may cause the Bipod legs to retract, resulting in the firearm dropping suddenly.
6. Make sure that the legs are at least 1 inch behind the muzzle when the Bipod is installed and in the retracted position.
7. Do not use the Bipod in or on a motorized vehicle.